

XIKAR HumiFan™ Humidor Air Circulator

Instructions for Use

How to setup your new XIKAR HumiFan™ Humidor Air Circulator:

- 1) Remove the battery compartment door on the back of the fan unit.
- 2) Remove the shrink-wrap from the four AA batteries; re-install in appropriate direction as shown.
- 3) If batteries are installed correctly, the LED Battery Status Indicator will flash.
- 4) Replace the battery compartment door.
- 5) Place fan unit with the silver fan vent facing toward the top of your humidor, completely unobstructed.
- 6) Position the back of the fan unit with the battery compartment door placed against any humidor wall.
- 7) The fan will run for 15 seconds and then rest for 15 minutes.

To check the battery on your device, press and hold the STATUS button. The LED Battery Status Indicator will flash and the fan will run.

If the light flashes green- operating normally with healthy batteries.

If the light flashes red- operating normally but batteries require replacement soon.


If the light does not flash and the fan does not run- batteries are dead and need to be replaced.

©2017 XIKAR, Inc.

Features

Item # 831XI

- Measures 5.9"W x 2.95"H x 0.98"D
- Angled centrifugal fan displaces air from the top of the unit.
- Oversized intake for maximum air redistribution.
- Four AA batteries included.

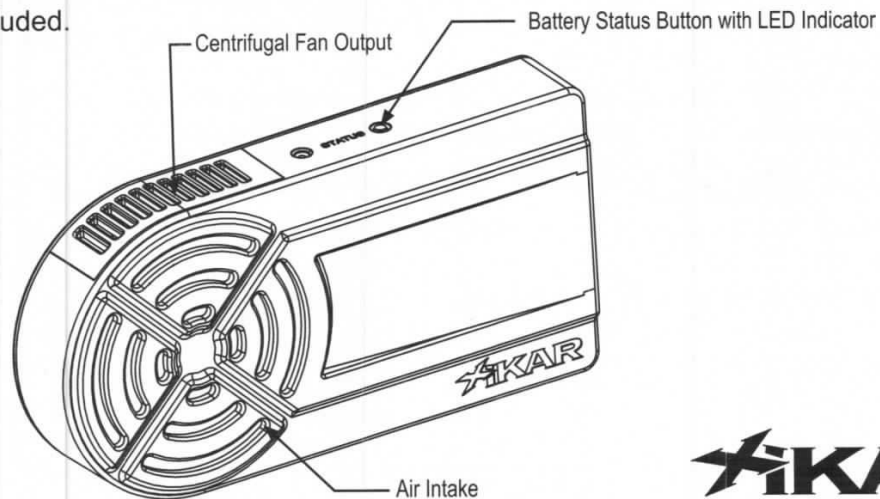

Lifetime Guarantee
XIKAR, Inc.
866-676-7380
WWW.XIKAR.COM
Made in China